

We want you to be able to enjoy the many benefits of an Isiteek deck long into the future, so we have created this comprehensive care and maintenance guide to help you.

Isiteek has been designed to require minimal maintenance, leaving you more time to enjoy your boating! With this in mind, we've outlined how simple maintenance can help to prolong the life of your beautiful new deck.

If you have any questions regarding the maintenance of your Isiteek deck, please get in touch with your distributor.

Find your local dealer at www.isiteek.com/find-a-dealer/.

WHAT'S COVERED IN THIS CARE & MAINTENANCE GUIDE?

Your Isiteek deck is straightforward to keep clean and requires far less general maintenance than a typical teak or hardwood deck. We have put together some care and maintenance guidance and tips that will help you get the most from your Isiteek deck.

We start with an introduction to our five steps to a clean deck, providing clear guidance on using cleaning chemicals.

THE FIVE STEPS TO A CLEAN DECK

By following these five simple care steps we believe your Isiteek deck will keep its good looks for longer.

Our five step care program is designed to provide an appropriate level of intervention for every problem.



STEP 1 : USE CLEAN FRESH WATER

Daily life on your boat will inevitably result in general spillages involving foods such as ketchup and drinks like red wine, that if left can prove more time consuming to remove.

So, we suggest all spills are cleaned promptly to save you time later. Here is what to do:

- Firstly absorb up as much liquid from the spill as you can using a cloth.
- Then use warm water to clean, following the grain rather than wiping the offending stain around in swirls.
- If it's a more stubborn stain, we suggest methylated spirit which is pH neutral or even baby wipes but would suggest bio-degradable brands only.
- Rinse and wipe up any excess water.

If this simple intervention using fresh water or methylated spirit hasn't removed the stain please jump to step two.

STEP 2 : DEALING WITH DIFFICULT SPILLAGES

Sometimes stains and spills can require a little more effort. Especially things like oil, diesel and petrol.

We'd suggest following these simple ideas using a pH-neutral cleaning detergent like our recommended Wash and Care product, diluted with water and applied to the area with the stubborn stain.

- Leave the diluted pH-neutral detergent to sink into the affected area of Isiteek for no more than a few minutes. This works well for more difficult spills like fuel or oil.
- This approach will help to 'lift out' the stain.
- Rinse and wipe away with a clean cloth, to remove excess water and detergent.

If the stain persists please see step 3.

STEP 3 : USING A SCOTCH BRITE PAD

Scotch Brite Pads are widely available from good retail stores and online from places like Amazon. This everyday cleaning aid can work wonders on more stubborn stains. Please ensure your deck is dry before scrubbing, or starting with water or a pH neutral cleaner.

Here is how we'd suggest using a Scotch Brite Pad on your Isiteek deck:

- Use water or a clear pH-neutral cleaner diluted with water.
- Using your Scotch Brite Pad, scrub along the affected deck area in line with the Isiteek grain.
- Ensure you are careful when scrubbing along caulking. Do not use a Scotch Pad on Soft Caulking areas.

This simple solution should remove most everyday stains but if it's proving difficult, we suggest using step 4.

STEP 4 : USING A PRESSURE WASHER

Pressure washing (also known as Jet Washing) can be a great way to get a deep clean with less of the "scrub". Here are some important considerations before starting.

- Most domestic pressure washers can be used. But we recommend a typical working height of around 20cm. Your pressure washer should be able to provide a maximum pressure of 135 bar. Pressure washers of this standard will be readily available in most equipment shops and online.
- Start from the top of the affected area and work along the planks in the direction of the grain for best results.
- Ensure to remove any excess or standing water from the deck using a clean broom or squeegee.

STEP 5 : SAND THE AFFECTED AREA

SANDING SMALL AREAS

If a stubborn stain persists you can sand a small area using 60 grit sandpaper (available from any hardware store) along the Isiteek grain. Rinse with fresh water and wipe up any excess water.

RESTORING YOUR DECK'S APPEARANCE

Your Isiteek deck may gradually darken or lighten with age and may lose some of its graining structure, but don't worry! This is easily rectified as Isiteek can be sanded like a teak deck. Use 60 grit sandpaper and sand in line with the grain to bring back the colour and the grain. Your deck will look like new in no time. Do not use power sanders on Isiteek.

IMPORTANT CLEANING CONSIDERATIONS

Before you use a cleaner on your deck we strongly recommend you review these important considerations before you get started. You can also check which cleaners are prohibited as shown on our list.

USE A pH NEUTRAL CLEANER

The most important consideration with any deck cleaner is to ensure it is a pH neutral (pH7) product. All pH neutral products need to be used in temperatures below 30 degrees.

CLEANING QUICK TIPS

- Do not allow any cleaners used anywhere on your boat to evaporate on the surface of your Isiteek deck.
- Check the contents and ingredients of the cleaner you use as it may contain chemicals, solvents and acids that are aggressive and may damage Isiteek, especially in hotter temperatures.
- Always wash your deck with plenty of freshwater if you think any residue has contaminated the surface.
- Follow the instructions on the cleaner you use.
- Be aware that the temperature for using some products refers to the temperature of the deck rather than the air.

CLEANING PRODUCTS NOT TO USE

Do not apply any exterior wood cleaners, teak oils, deck brightening chemicals, or any other product designed for use on a teak or a wooden deck.

Do not use any acids, such as oxalis, phosphoric, sulphuric, hydrochloride, acetic or citric, to name a few of the ones found in cleaning solutions. Also, be wary of general deck cleaners offered in chandleries, many of which contain a variety of ingredients which may bleach or discolour your Isiteek deck, even when diluted correctly.

By following this guidance you will avoid any impact to your Isiteek Material Guarantee.

We've worked hard to identify cleaners that can be harmful to your Isiteek deck. We ask you to avoid the use of any on the list below because they contain a high pH and/or harmful chemicals. A simple idea is to check your cleaner is pH neutral first.

Please remember that the use of incorrect cleaners will void the Isiteek Material Guarantee.

Please note this is not an exhaustive list and it is the owners responsibility to check that the cleaner to be used is pH neutral (pH7) .

ARTIFICIAL SOLVENTS

ARMOR ALL WASH AND WAX

AWLGRIP - AWLWASH

CITRA-SOLVE

CSM BY ORLICHEM

DAWN WASHING LIQUID

CREAM CLEANERS (E.G CIF)

BLEACH CLEANERS & SPRAYS

CLEANERS CONTAINING SODIUM LAURYL SULPHATE

NATURAL SOLVENTS

STRONG ALKALIS

NANO WASH BY NANOTECH

ORPINE CLEANING PRODUCTS

SIMPLE GREEN CLEANING PRODUCTS

STARBRITE CLEANING PRODUCTS

MEGUIARS CLEANING PRODUCTS

CHEMICALS

DECK CLEANER BY THE NATURAL WAY OF CLEANING

RECOMMENDED CLEANING SOLUTION

We realise that our list of harmful cleaners is long, so we've worked with a trusted producers in Europe and the UK and can recommend Chemworld 'Wash and Care' and 'Deck Buddy'.

You can buy these cleaners from your Isiteek Dealer.

PROTECTING YOUR DECK

Your day-to-day activity on your Isiteek deck will be varied. We understand daily life on board your boat could present challenges that could cause damage.

Here are some pointers to protect your deck further:

SHOES

Do not wear high-heeled shoes and be mindful that many shoe types with rubber or plastic soles can leave scuff marks.

HOT OBJECTS

Do not place hot objects, pans and BBQs directly on your Isiteek deck, as these will mark the surface and could cause permanent damage.

HEAVY OR POINTED OBJECTS

Do not place heavy objects with narrow or pointed legs, such as furniture, on your Isiteek deck without a pad or coaster underneath. Such objects will leave small indentations or darker marks on the deck or could cause permanent damage.

MOVING OBJECTS ON YOUR DECK

Try to avoid dragging objects across the decking as this may cause marking, which could need to be sanded out. If this does occur, try using a Scotch-Brite pad in line with the grain.

If you have questions about your Isiteek deck, we'd suggest referring to our website FAQ section for answers that are available 24/7. If you are unable to find a response, please get in touch with your Isiteek Dealer.